

UTT11 Beam Adapter Structure-attachment Adapter

Function: Designed for bracing pipe against sway and seismic disturbance. The pipe attachment component of a sway brace system used in conjunction with a UTT Manufacturing structural attachment fitting and joined together with a bracing pipe element forms a complete sway brace assembly. Sway brace assemblies are intended to be installed in accordance with NFPA13 and the manufacturer's installation instructions.

Type: Sprinkler Pipe Sch 10, Sch 40, GB/T3091, IS G3454

Size:One size fits braced pipe up to 8",with 1/2"bolt hole for structure

Material: Ductile iron QT450 Finish: Electro-galvanized

Approvals:









FM Maximum Design Load								
Brace Member	ins ang	Horizontal load ratings installation angle 30°-44		Horizontal load ratings installation angle 45°-59°		Wt.Each		
	lbs.	kN	lbs.	kN	lb.	kg		
1" SCH40 pipe	970	(4.31)	1660	(7.38)	1.94	(0.88)		

Step 1	Step 2	Step 3

The installation procedure of UTT11 accessories as shown in the figure, the connecting accessories use the UTT10, the installation torque of bolt is $50\,\tilde{}65N$ • M. Tighten the shear bolt until heads break off after gripping the H steel The maximum thickness ofH steel is 16mm







